



Skokie 847-677-2010 Glenview 847-657-9020 Wheeling 847-537-2255

Bullhorn

GETTING STARTED

The megaphone is activated when the Push-To-Talk switch, located on the hand grip, is pressed and switched off when the switch is released.

Speak with your mouth 1/2" to 1" away from the Microphone Mouth Piece. If amplification is not sufficient, move closer to microphone. Turn the Volume Control to adjust the sound level without causing howling

INSTALLING BATTERIES

Replace batteries at regular intervals to assure freshness. Drained batteries do not provide sufficient sound volume.

NOTE: Use "C" size 1.5 Volt alkaline batteries.

1. Turn the Battery Compartment Cover counter-clockwise to remove
 2. Insert eight type "C" batteries into case – Note correct polarity
 3. Replace the Battery Compartment Cover by turning it clockwise until tight – Do not over tighten
- Remove the batteries and store separately when not in use for a long period of time.

SAFETY PRECAUTIONS

- **Never place** your megaphone in strong **sunlight** or near a **heater** for an extended **period of time**.
- When the megaphone is not in use for a long period of time, remove the batteries and store separately.
- Amplified sound or howling may cause **damage** to people's **ears**. **Do not use this megaphone near the person**
- When cleaning the megaphone body only use neutral detergents. Never use thinner or benzene.