



Skokie 847-677-2010 Glenview 847-657-9020 Wheeling 847-537-2255

Coffee Maker

IMPORTANT SAFEGARDS

1. Be sure switch is turned "OFF" before plugging cord into wall outlet. If coffeemaker **does not have a switch**, be sure coffee maker **contains water** or brewed coffee **before plugging in**. **Do not leave** coffeemaker **plugged in when it is not being used**.
2. Plug coffee maker into 120 volt AC **grounded** electric outlet **ONLY**. The cord has a three-prong plug which mates with a standard three-prong grounded wall outlet. Do not cut or remove the third prong from the plug. If an adaptor is used, be sure adaptor wire and wall outlets are grounded. If there is any doubt as to whether the outlet is grounded, check with a qualified electrician.
3. Coffee maker should always be unplugged and allowed to **cool before cleaning**.
4. Do not let cord touch hot surfaces or hang over the edge of a counter, table, or other surface area.
5. Make sure cover, basket and stem are properly attached before coffeemaker is plugged in. (See instructions). No part of the coffeemaker should be removed during the brewing cycle. **Scalding could occur**.
6. Your coffeemaker, its cord and plug should **not be used outdoors**, immersed **in liquids**, placed near **a hot electric** or **gas burner** or place in a **heated oven**.
7. Do not touch coffeemaker when it is hot. **Use handles or knobs**.
8. Supervise closely when coffeemaker is used by or near children.
9. Do not use your coffeemaker if it or its cord is damaged or not working properly.
10. If you choose to use an extension cord it is **"use at your own risk" 10 Gauge** extension cord **25 ft** is what we suggest.

INSTRUCTIONS FOR MAKING COFFEE

1. Always use coffee maker on a dry, level, **heat-resistant** surface, away from any edge. Be sure hands are dry.
2. With basket and stem removed, fill coffeemaker with **COLD** water to desired cup level. Marks on inside of coffeemaker show cup levels. **Do not fill past maximum cup level**.
3. Place stem into heating unit well in bottom of coffeemaker, then put basket onto stem. To basket, add electric perk ground coffee or coffee ground for all coffeemakers. **See Chart for recommended amounts** of ground coffee to use depending on number of cups being made. **A filter is not needed** in the bottom of the basket. Spread grounds evenly in basket. Use standard measuring cups to measure coffee. Do not let grounds fall into stem opening. Do **not use "Drip" or finely ground coffee** as basket can flood. The amount of ground coffee recommended will make mild-strength coffee which most people prefer. The amount of coffee used can be adjusted to suit your preference.

SPECIAL NOTE ON GRINDING COFFEE BEANS

If grinding your own coffee beans, **grind to medium** coarseness for best results. **DO NOT** grind too fine (powder-like) as this can cause basket to flood.

100 –CUP MODEL

WATER MEASURE OF

LEVEL GROUND COFFEE

- 100 cups 6 ¼ cups
- 80 cups 5 cups
- 60 cups 4 cups
- 40 cups 2 ½ cups

Do not make less than 40 or more than 100 cups of coffee at one time.

55-CUP MODEL

**WATER MEASURE OF
LEVEL GROUND COFFEE**

- 55 cups 3 ½ cups
- 45 cups 2 ¾ cups
- 35 cups 2 cups
- 25 cups 1 ½ cups

Do not make less than 25 cups or more than 55 cups of coffee at any one time.

36-CUP MODEL

**WATER MEASURE OF
LEVEL GROUND COFFEE**

- 36 cups 2 cups
- 30 cups 1 ¾ cups
- 24 cups 1 ½ cups
- 18 cups 1 ¼ cups
- 12 cups 1 cup

Do not make less than 12 cups or more than 36 cups of coffee at one time.

4. Place cover on the coffeemaker and turn to secure in place inside handles. Note arrows on cover for correct turning. To reduce coffee spills, especially if coffee maker is tipped over, make sure **cover** has been **turned clockwise until** the cover is completely **secured** into the handle slots. Care should be used when moving the coffeemaker as the cover **only temporarily** reduces coffee from spilling if coffeemaker is tipped over.

5. Plug cord into a 120 volt AC grounded electric outlet **ONLY**. Also turn switch "ON" for models 13500 and 33600.

CAUTION: Your coffeemaker has a long cord for easy access to electric outlet. To prevent personal injury or property damage, do not allow long cord to drape or hang over the edge of a countertop, tabletop or surface area where it can be pulled by children or tripped over. Do not allow children to be near or use this coffeemaker without close adult supervision.

6. Coffeemaker will stop perking automatically (each cup requires no longer than 1 minute brewing time). Coffee is **ready when light in base glows**. Coffee will remain serving temperature as long as coffeemaker is plugged in (and switch is "ON"). **Before serving** turn cover to **remove basket and stem**. Using a hot pad, remove coffee basket, and stem. If coffee basket and stem are not removed, bitter oils from the extracted grounds will drip into coffee. Replace cover making sure it is completely secured into the handle slots.

7. For cup-on-saucer filling, press faucet handle down. Release handle when filled. For continuous flow when filling coffee server, lift handle straight up until it locks into open position. Lower handle when server is filled.

8. When about 3 cups of coffee remain in coffeemaker, or when coffee can no longer be seen in the view tube, unplug cord from electric outlet and turn switch "OFF".

9. To reheat cold coffee, simply plug coffeemaker in and turn switch "ON". Be sure basket and stem are removed. There must be at least 12 cups of coffee in the coffeemaker to reheat.

INSTRUCTIONS FOR HEATING WATER FOR INSTANT BEVERAGES

Plain water may be heated in your coffeemaker for use with instant beverages [will most likely have a coffee taste to is so you are aware]. Simply fill the clean coffeemaker with cold water to the desired cup

level and place stem and clean empty basket into position as for making coffee. Secure cover in place and plug coffeemaker in. Also turn switch to "ON" position for models 13500 and 33600. Heat water until perking stops and light on base glows. Remove cover, lift out basket and stem, with a hot pad, and replace cover, making sure it is secured in place. Unplug coffeemaker when less than 3 cups of water remain. Inside of coffeemaker may darken after heating water which is normal and does not affect the coffeemaker or the water heated.