



Skokie 847-677-2010 Glenview 847-657-9020 Wheeling 847-537-2255

Cotton Candy Machine

Electrical requirements:

The machine requires a 15 amp, 120 volt, 60 cycle electrical service.

If you choose to use an extension cord it is **“use at your own risk”**. **10 gauge extension cord 25ft** is what we suggest.

Controls and functions:

Main Switch: Turns motor “ON” or “OFF” and supplies current to the heat switch.

Heat Switch: Turns current to the heating element [ribbon] “ON” or “OFF”.

Heat Control: Increases or decreases voltage to ribbon wire heating element using a graduated dial.

Operating Instructions:

1. **With main switch still OFF, fill floss head. Always fill it 90% full with sugar.** This 90% level is necessary to obtain a balanced condition in the floss head. **DO NOT OVERFILL!** Excessive vibration will occur if overfilled. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration of the head.
2. **NEVER add sugar when motor is running.**
3. Turn Main Switch and Heat Switch “ON”.
4. Turn heat control knob clockwise to maximum setting to initiate the fastest possible warm up.
5. The machine should start making floss in a few seconds. When the unit starts making floss, you must **reduce the heat** setting. Turn the heat control knob counter clockwise **to eliminate smoking**. If you operate the unit at “start up” setting, you will “carbonize” the ribbon.
6. Once you find the ideal setting for the Heat Control, operate with the setting near this position each time.

Warning:

- Never operate equipment for a prolonged period of time with the Heat Control in a position that causes the sugar to smoke.

- Keep clear of the floss head to avoid possible injury. Keep your hands away from spinning head.

Shut down procedure:

When Completing operation for the day [or any prolonged period], run all the sugar out of the floss head. When empty, turn the heat to highest position for approximately one minute to “clean” the band by baking off remaining sugar. **NEVER put water in the floss machine.**

Cleaning Instructions:

Unplug the machine and wait for the floss head to cool down to room temperature. Wipe all surfaces with a clean, damp cloth.

1. Grip cone as shown.
2. Break into web of floss with the cone.
3. Wind the sugar onto the cone.
4. Lift web of floss from the pan and roll onto the cone.



5.



6.



7.



8.

