



Skokie 847-677-2010 Glenview 847-657-9020 Wheeling 847-537-2255

Jellyfish Light

Warning:

- To reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture
- Do not spill water or other liquids into or on to your unit.
- Be sure that the local power outlet matches that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when its cover is removed.
- Never plug this unit in to a dimmer pack
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only; use of this product outdoors voids all warranties.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 10 for cleaning details.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- If you choose to use an extension cord it is **"use at your own risk" 10 gauge extension cord 25ft** is what we suggest.
- The fixture should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the appliance.
 - C. The appliance has been exposed to rain or water.
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

System Menu: When making adjustments you can press ENTER to confirm your setup or you can wait 8 seconds for automatic setup. To exit without making any adjustments press the MENU button.

ADDR - DMX Address Setting.

1. Tap the either the MENU, UP, or DOWN buttons until "ADDR" is displayed, press ENTER.
2. "1" will now be displayed and flashing. Press the UP or DOWN buttons to find your desired address. Press ENTER to set your desired DMX address.

CHND - This will let you the DMX Mode you want to run. You can choose between 3 channel mode and 28 channel modes.

1. Tap the MENU button until "CHND" is displayed, press ENTER. Either "3CH" or "28CH" will be displayed.
2. Tap the UP or DOWN buttons until your desired DMX channel mode is displayed, press ENTER to confirm.

SLND - This will let you set unit as a slave in a master/slave configuration.

1. Tap the MENU button until "SLND" is displayed, press ENTER. Either "MAST", "SL 1", "SL 2", "SL 3", or "SL 4" will be displayed.
2. Tap the UP or DOWN buttons until your desired mode setting is displayed, press ENTER to confirm. Note: Each slave mode is a different light show.

NOTE: In a Master/Slave configuration you can set one fixture to Master and then set the next fixture to "SL 2", the fixtures will now have contrast movement to each other.

Sh 0 - Sh 11 - Show modes 0 - 11 (Factory programs). Show mode can be run with sound activity or without. For show mode to run without sound activity turn sound activity off.

1. Tap the MENU button until "ShNd" is displayed, press ENTER.
2. "Sh X" will now be displayed, "X" representing a number between 1-11. Programs 1-11 are factory programs, while "Sh 0" is random mode. Press the UP or DOWN buttons to find your desired show and press ENTER to confirm.

SOUN - Sound Active mode.

1. Tap the MENU button until "SOUN" is displayed, press ENTER.
2. The display will show either "ON" or "OFF". Press the UP or DOWN buttons to select "ON" to activate sound active mode, or "OFF" to deactivate sound active mode.
3. Press ENTER to confirm.

BLND - Blackout or Standby mode.

1. Tap the either the MENU button until "BLND" is displayed, press ENTER. Either Yes or No will be displayed.
2. To activate Blackout tap the UP or DOWN buttons until Yes is displayed, press ENTER to confirm and exit. The fixture will now be in Blackout mode. To deactivate Blackout mode, select No and press Enter.

LED - With this function you can have the LED display turn off after 10 seconds.

1. Tap the MENU button until "LED" is displayed, press ENTER.
2. The display will show either "ON" or "OFF". Press the UP or DOWN buttons to select "ON" to keep the LED display on at all times, or "OFF" to switch to have the LED display switch off after 10 seconds.
3. Press ENTER to confirm.

IDSP - This function will reverse the display 180°.

1. Tap the MENU button until "IDSP" is displayed, press ENTER.
2. Press ENTER to "flip" the display. Press ENTER to "flip" it again. Press ENTER when you have made your desired setup.

FHRS - With this function you can display the running time of the fixture.

1. Tap the MENU button until "FHRS" is displayed, press ENTER.
2. The running time of the fixture will now be displayed. Press MENU to exit.

VER - With this function you can display the version software of the fixture.

1. Tap the MENU button until "VER" is displayed, press ENTER.
2. The software version will now be displayed. Press MENU to exit.

Operating Modes: The Jellyfish can operate in three different modes.

- Sound Active mode - The unit will react to sound, chasing through the built-in programs.
- Show mode - Select one of 11 preprogrammed shows.