




Skokie 847-677-2010 Glenview 847-657-9020 Wheeling 847-537-2255


## Karaoke machine

### IMPORTANT SAFETY INSTRUCTIONS:

1. Do not Block any of the ventilation openings.
2. Do not set up near a heat source
3. If you choose to use an extension cord it is **“use at your own risk” 10 gauge** extension cord and **25ft** is what we suggest.

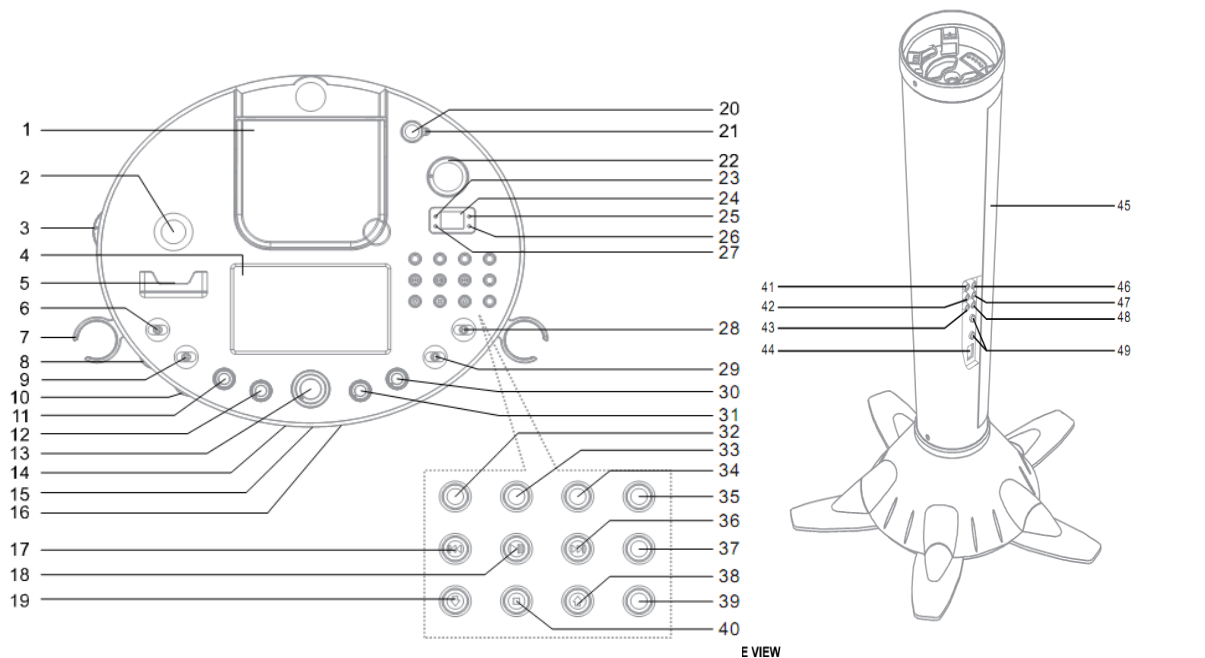

- |                                     |  |  |
|-------------------------------------|--|--|
| 1. CD Door                          | 16. MIC 2 Jack                           | 32. PROGRAM button                     |
| 2. iPod support                     | 17. SKIP (KEY/ECHO) – button             | 33. REPEAT button                      |
| 3. iPod adjustment knob             | 18. PLAY/PAUSE button                    | 34. RANDOM button                      |
| 4. 7" TFT LCD Color screen          | 19. MENU DOWN button (for iPod use only) | 35. KEY button                         |
| 5. iPod Docking Station             | 20. ON/OFF button                        | 36. SKIP (KEY/ECHO) + button           |
| 6. Function Selector                | 21. ON/OFF LED                           | 37. ECHO button                        |
| 7. Mic Holder                       | 22. TUNING knob                          | 38. MENU UP button (for iPod use only) |
| 8. COLOR control                    | 23. PROGRAM LED                          | 39. SELECT button                      |
| 9. ASPECT RATIO Selector (4:3/16:9) | 24. LED Display                          | 40. STOP/MENU button                   |
| 10. BRIGHTNESS control              | 25. PLAY/PAUSE LED                       | 41. VIDEO IN Jack                      |
| 11. BALANCE control                 | 26. CDG LED                              | 42. AUX IN Jack (L)                    |
| 12. MIC 1 Volume control            | 27. REPEAT LED                           | 43. AUX IN Jack (R)                    |
| 13. MASTER VOLUME control           | 28. BAND Selector                        | 44. AC Power Cord Jack                 |
| 14. MIC 1 Jack                      | 29. Monitor Selector                     | 45. Pedestal                           |
| 15. HEADPHONE Jack                  | 30. AUTO VOICE CONTROL                   | 46. VIDEO OUT Jack                     |
| MIC 2 Jack                          | 31. MIC 2 Volume control                 | 47. AUX OUT Jack                       |
|                                     |  | 48. AUX OUT Jack (R)                   |
|                                     |  | 49. Speaker Jacks R/L                  |

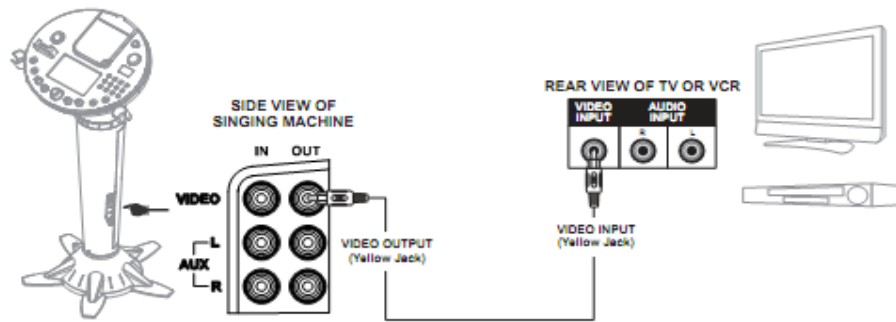


### CONNECTING TO YOUR TV OR VCR/DVD PLAYER

Your Singing Machine is designed to connect to your TV the same way you would connect most video cameras, VCR/DVD players or video game consoles.

We have provided RCA cables to connect your unit to a TV, VCR/DVD player, video device or an external audio/sound system. The RCA cables have three connections at each end (white and red are for left and right audio connections and the yellow is for video connection).

**Please follow the steps below to display CD + lyrics on the TV screen:**

- (1) Locate the multi-colored RCA cables
- (2) Connect video cable (yellow) to the VIDEO OUT on the side of the Singing Machine
- (3) Connect the other end of the video cable (yellow) to the video input on your TV or VCR/DVD Player

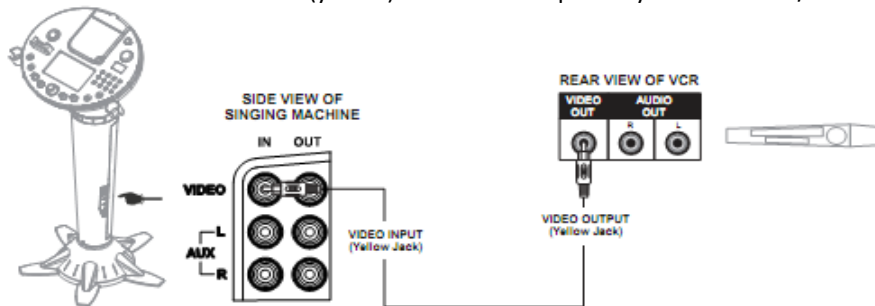

### CONNECTING A VIDEO COMPONENT FOR INPUT

Please follow the steps below to display CDG lyrics on the Singing Machine's monitor from another video source:

- (1) Locate the multi-colored RCA cables
- (2) Connect video cable (yellow) to the VIDEO IN jack on the side of the Singing Machine
- (3) Connect the other end of the video cable (yellow) to the video output on another video source such as a VCR.
- (4) Set the Function selector to AUX mode and the Monitor Selector to AUX.

### CD OR CD+G OPERATION

This unit is designed to play CDs and CD+Gs bearing the identification logo. If the disc does not conform to the standard, it may not play properly.

### TURNING POWER ON/OFF

- To turn on the unit, press the ON/OFF button, the ON/OFF LED Indicator will light up.
- To turn it off, press the ON/OFF button again, the ON/OFF LED Indicator will turn off.

### FUNCTION SELECT

Set the FUNCTION SELECTOR switch to CDG.

## LOADING A DISC

- Open the CD door, place a CD or CD+G disc in the compartment with the printed side facing upward and the shiny side facing down.
- Gently close the CD door. The LED window will display the total number of tracks. (If no disc is loaded, the LED will display "NO". If a CDG is loaded, the CDG indicator will light up.)

### **Note:**

**(Refer to the Trouble Shooting Guide "If a disc is loaded but the total tracks do not appear".)**

## PLAY/PAUSE

- Adjust the MASTER VOLUME control on your unit to a comfortable level.
- Press the PLAY/PAUSE button. The first track [ ] will display on the LED of the unit and the PLAY/PAUSE LED will illuminate.
- To temporarily stop playing, press the PLAY/PAUSE button. The PLAY/PAUSE LED Indicator will flash.
- To resume play, press this button again.
- **SKIP (For both CD and CDG discs)**
- During STOP mode you can skip forward or back to your desired track number by pressing the SKIP buttons **⏮ - SKIP - ⏭**.
- To resume playing the selected song press PLAY PAUSE button
- **SEARCH (For audio CD disc only)**
- When playing any audio CD, press and hold the SKIP button **⏮ - SKIP - ⏭**. The CD will search at high speed in the forward or backward direction. Normal play will continue when you release the button.

## KARAOKE FUNCTIONS

Karaoke functions can be performed on CDG/iPod/AUX modes. Sing along with the music by plugging in the provided microphone into either one of the microphone jacks on the unit.

**Warning - Tapping or dropping the microphone while it is on can permanently damage your microphone. Resist the urge to swing the microphone around by the cord!**

### MIC VOLUME

Adjust the MIC VOLUME control to a desired level to obtain the best performance. (MIC 1 and MIC 2 volume can be adjusted separately.)

**Warning - To avoid microphone feedback do not hold the microphone too close to the speaker.**

### ECHO

Press the ECHO button once then press the SKIP (KEY/ECHO) (- / +) buttons to adjust the ECHO effect (Level: 0 to 8) to enhance the singers' voice for a concert hall effect.

### KEY CONTROL

Press the KEY button once then press the SKIP (KEY/ECHO) (- / +) buttons to adjust the KEY control (Level: -4 to 4) to obtain the best key for the singers' performance.

### BALANCE

Adjust the BALANCE control between the prerecorded singer's voice and the music when using a multiplex karaoke disc. (Please see Glossary of terms on page 21 to learn more about multiplex.)

### AUTO VOICE CONTROL

AUTO VOICE CONTROL can be activated by rotating the AUTO VOICE CONTROL knob to the right. The vocals on the multiplex recording will be muted when using the microphone. When the microphone is not in use the pre-recorded vocals will resume on a multiplex disc.

## (MULTIPLEX DISCS ONLY)