



Skokie 847-677-2010 Glenview 847-657-9020 Wheeling 847-537-2255

Portable Buddy

TO OPERATE:

Plug hand held **microphone into DYNAMIC microphone jack**. Turn amplifier on (large rocker switch located on the amplifier panel). The **red light** will show that **power** is available. Rotate **MIC VOLUME** control knob to obtain desired loudness level throughout the coverage area.

MICROPHONE INPUTS

There are three microphone inputs, which can be used simultaneously:

DYNAMIC - for standard dynamic cartridge microphones

CONDENSER - for electric or condenser microphones which require phantom power (Supplied from the amplifier)

WIRELESS - accepts line-level output from wireless microphone.

AUXILIARY

To **add** pre-recorded **music or sound effects** during your presentation, just plug your CD player, iPod, tape player or computer sound card into the **LINE IN** jack. Separate **VOLUME** and **TONE** control knobs let you balance the program source with the live microphones. If using an external wireless receiver, for best sound quality it should be connected to the **LINE IN** jack.

OUTPUT

To tape record your speech or program, connect the **LINE OUT** on the amplifier to the input on a tape recorder.

SPEAKERS

Two separately amplified speaker jacks (4-8 ohms) allow you to use internal speaker and extension speaker for additional sound power or true stereo output. Unit speaker is wired internally. Plug external speaker into right speaker jack for stereo. Note: when using a stereo

AUX source with a single speaker, only one of the stereo channels will be heard, switch stereo/mono switch to mono for both channels to be heard. However, all **MIC** inputs are heard equally on both channels.