



Skokie 847-677-2010    Glenview 847-657-9020    Wheeling 847-537-2255

## Pretzel Warmer [Table Top]

### Electrical Requirements:

- 120 VAC, 60 Hz. 15 amp protected circuit
- If you choose to use an extension cord it is “**use at your own risk**” **10 gauge** extension cord **25ft** is what we suggest

### Directions:

1. Plug power cord into **outlet**.
2. Turn on power switch on rear of the unit.
3. **Pre-heat** the unit for approximately **ONE hour**. The I setting is for LOW warmth and the II setting is for HIGH warmth.
4. Dispensing temperature for cheese cups is between 125 Deg. F and 140 Deg. F

**Note** - This unit is only for the warming Do not dispense volatile foods.

### Controls and Their Functions:

1. For warming of cheese cups, use only the HIGH warmer setting.
2. Pretzel warming can be done using the HIGH or LOW settings for desired warmth.
3. Other foods may also be warmed using this machine.

### Cleaning Guidelines:

The plastic exterior of the Cheese Cup Warmer is easy to keep clean. Usually a damp cloth will remove all dirt and grease spots. **NEVER USE ABRASIVES.**

1. Turn power switch to the OFF position. Disconnect the unit from power source.
2. Wipe exterior surface of unit.
3. Wipe interior areas of the unit, confirm the unit is cool and unplugged.