



Skokie 847-677-2010

Glenview 847-657-9020

Wheeling 847-537-2255

1000-watt cordless stainless-steel warming tray keeps food warm. 8 minute warm up time; stays hot for 60 minutes after unplugging. Warming surface measures 23-3/4-inch by 7-3/4-inch. Automatic temperature control protects against overheating. 2 indicator lights-red 'power' light, green 'ready' light. Stay cool handles; detachable cord.

When using electrical appliances, basic safety precautions should always be followed including the following:

- 1. Read all instructions.**
- 2. DO NOT touch hot surfaces. Use handles or knobs.**
- 3. To protect against electrical hazards, DO NOT immerse cord, plugs, or the appliance in water or other liquid.**
- 4. Close supervision is necessary when any appliance is used by or near children.**
- 5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.**
- 6. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Toastess for examination, repair or adjustment. See Warranty section.**
- 7. The use of accessories or attachments not recommended by Toastess may cause hazards.**
- 8. DO NOT put food directly on the warming tray. Always use heat-proof dishes, containers and crockery.**
- 9. DO NOT use outdoors.**
- 10. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.**
- 11. DO NOT place on or near a hot gas or electric burner, or in a heated oven.**
- 12. Extreme caution must be used when moving an appliance containing hot liquids.**

13. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, remove plug from wall outlet and then remove other end from appliance.

14. This appliance is for Household Use Only. DO NOT use appliance for other than its intended use.

15. DO NOT leave unit unattended while in use.

HOUSEHOLD USE ONLY

GROUNDING PLUG- To reduce the risk of electric shock this appliance has a grounded plug. (2 blades and 1 pin) If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

HOW TO USE

Connect the power cord to the Warming Tray and then plug into a 120 volt A.C. outlet. The Warming Tray will take approximately 8 minutes to reach the maximum temperature. After 8 minutes the Warming Tray can be left plugged in or unplugged from the wall outlet. If it is plugged into the outlet, the thermostat will switch on and off automatically. If unplugged the Warming Tray will continue to give off heat for approximately 60 minutes. The red 'power' indicator light will remain 'On' as long as the Warming Tray is plugged in. The green 'ready' light will come on when the tray has preheated. If the unit is left plugged in, the green light will cycle on and off as the unit maintains the correct temperature.

IMPORTANT: Porcelain and china dishes may cause scratches. Place dishes carefully on the stainless steel heating surface so they do not scratch.

HELPFUL HINTS:

- Ensure that the Warming Tray is always placed on a flat and sturdy surface.
- Covered crockery dishes with a flat base and edges that are not too high keep food the warmest.

CLEANING

Always unplug the appliance and let it cool before cleaning. Clean the Warming Tray by wiping with a cloth dampened in warm soapy water. Dry thoroughly. NEVER immerse the Warming Tray in water or any other liquid. NEVER use abrasive cleaning products, bleach or alcohol

