

Quick Setup

IMPORTANT: Before using this product, make sure you read these instructions and the safety instructions in the online User's Guide.

Note: These illustrations show the Home Cinema 1080, but the instructions are the same for the Home Cinema 880 unless otherwise noted.

Contents

Make sure your projector box includes all of these parts:

 


Connect the projector

Video device


Home Cinema 880

Connect one end of an HDMI cable to the projector's HDMI port and the other end to an HDMI port on your video device.



Home Cinema 1080

 Connect multiple video devices and use the **Source Search** button on the projector or the remote control to switch between them.



Computer

 
Connect one end of an HDMI cable to the projector's HDMI port and the other end to an HDMI port on your computer.

Note: For more information on connecting the projector to your computer or other devices (camera, USB flash drive, etc.), see the online User's Guide.

Connect audio


Built-in speaker

The projector has a built-in speaker that can play audio from a video source (DVD player, streaming device, etc.) connected by an HDMI cable. If you connected a composite video cable to the Home Cinema 1080, connect one end to an RCA audio cable to the projector's audio input ports and the other end to your video device's audio output ports.



External speakers

 
You can connect the projector to external self-powered speakers through the **Audio Out** port.




Note: The projector's internal speaker is disabled when you connect external speakers.

Turn on your equipment


- 1 Turn on your computer or video source.
- 2 Plug in the projector. The **Power** light on the projector turns blue.

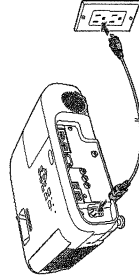

- 3 Open the AV Mute slide all the way.

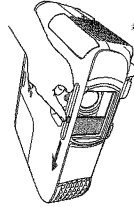


- 4 Press the **Power** button on the projector or remote control. The projector beeps, the Status light flashes blue, and then stays on.

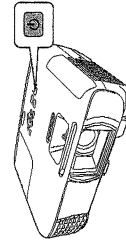

Note: To shut down the projector, press the **Power** button twice.

- 5 Use the arrow buttons on the remote control to highlight any of the options on the Home screen that appears, then press **Enter** to select it. You can switch between projection sources and quickly access various adjustment options from this screen.

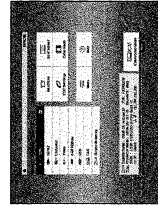


- 6 The default language of the menu system is English. To select another language, press the **Menu** button on the projector or remote control. Select **Extended** and press **Enter**. Select **Language** and press **Enter**. Select your language and press **Enter**. Press the **Menu** button to exit the menu system.

Adjust the image

- 1 If you don't see an image, press the **Source Search** button on the projector or remote control to select the image source.


Note: If you still see a blank screen or have other display problems, see the troubleshooting tips on the back of this sheet.

- 2 To raise the image, press the foot release button and lift the front of the projector. Release the button to lock the foot in position.

 


- 3 **Home Cinema 880:** To reduce or enlarge the image, press the **E-Zoom** buttons on the remote control.


Home Cinema 1080: To reduce or enlarge the image, turn the zoom ring.

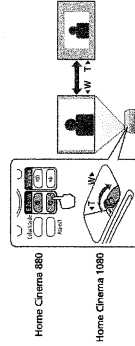

- 4 To sharpen the image, turn the focus ring.

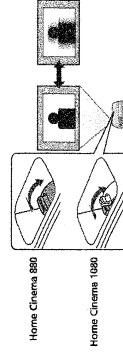

 
- 5 If your image looks like or , you may have placed the projector off to one side of the screen at an angle. Place the projector directly in front of the center of the screen, facing the screen squarely. If you can't move the projector, use the horizontal keystone slider on the projector to correct the image shape.



- 6 Your projector automatically adjusts an image that looks like or but if necessary you can press the or button on the projector to correct it.

Using the remote control

Install the batteries as shown (two AA batteries).

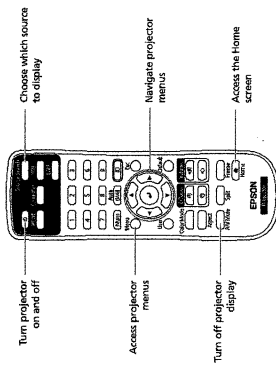

For more information on using the remote control, see the online User's Guide.

Mirroring a mobile device

Home Cinema 1080: If your mobile device (laptop, smartphone, or tablet) supports Miracast®, you can project or mirror your device's screen wirelessly. You do not need any additional software to use this feature.

Note: Some restrictions apply. See the online User's Guide for details.

Select screen mirroring settings

- 1 Press the **Menu** button on the remote control.
- 2 Select the **Network** menu and press **Enter**.
- 3 Select **On** at the **Screen Mirroring** setting.



- 4 Select **Screen Mirroring Settings** and press **Enter**. Press **Enter** again.

- 5 Select any of the **Screen Mirroring Settings** options as necessary. See the online User's Guide for details.



- 6 When you finish selecting settings, select **Set** and follow the on-screen instructions to save your settings and exit the menus.



*1135574007