




Skokie 847-677-2010

Glenview 847-657-9020

Wheeling 847-537-2255

- Turn off the sander & unplug from outlet.
- Bend the silver-line SL-8 sheet in the paper bender located on the drum cover [pictured].
- Tilt the SL-8 back onto the handle and lift the drum cover for easy installation.
- Roll the drum until the paper slot is facing you and adjust the cams so the arrows printed on the cams are facing you. The left arrow should point down, while the right arrow points up.
- Insert one end of the paper into the slot [pictured] and turn the drum around so that the paper wraps around the drum. Insert the other end into the slot and push both ends into the slot until the paper is snug in the drum. When using 20 grit or coarser paper, insert the top of the sheet first and then install the bottom half, it will insert easier.
- Using a 7/16" open wrench turn the left cam down ¼ turn, than turn the right cam up ¼ turn [pictured]. As you turn the second cam you will see the paper pull tight into the drum. **You must turn both cams a full ¼ turn to secure the paper.**
- Turning the cams more than the ¼ turn will not make the paper any tighter on the drum, ¼ turn on each cam is all you need to attach the sheet. Turning the cams too much can cause the cams to come completely around and loosen the paper.
- Lower the drum cover and return the sander to its upright position resting on the rear of the chassis.
- Plug the machine into an outlet, turn it on and slowly lower the drum to the surface being sanded as you walk forward. Lift the drum off the floor as you reach the end of the room, walk backwards on the same path and lower the drum to sand the floor as you return to the other end of the room. Sand in both directions.
- To remove used paper, reverse the process.
- For every coarse paper, [12 & 16 grit] it may be necessary to remove grit to insert the paper into the slot. First, bend the paper as instructed. Second, put on safety glasses and remove the grit by placing the paper on a hard surface [grit up] and hammering the grit off the flaps until manageable. Continue installation of the paper.

## Sander Floor Drum

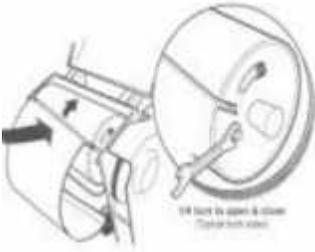

### **Proper Application & use of Silver-line Abrasives:**

**12, 16, 20 grit sheets, and discs:** For removing old surface coatings and leveling uneven floors.

**36, 40 grit sheets, and discs:** For intermediate sanding of all floors following rough sanding. For initial sanding of moderately worn floors.

**60, 80, 100 grit sheets, and discs:** For finish sanding of all floors prior to applying new coatings. For removing light scratches, sanding marks and minor surface damage.

**60, 80, 100, 120, 150, and 180 grit sandscreens:** For removing fine scratch marks prior to applying new coating. For light sanding between surface coatings.